



INFLATABLE IMAGES®

## **WARNING**

**READ AND FOLLOW ALL SAFETY LABELS, WARNINGS AND INSTRUCTIONS BEFORE ATTEMPTING TO SET UP AND DISPLAY YOUR INFLATABLE IMAGE®.**

**Adult supervision is required.** Your Inflatable Image is not a toy. Never allow children to set up, jump on or play with an Inflatable Image.

## **CAUTION**

**Shock and fire hazard.** Misuse may result in serious injury or property damage.

1. **Use only with a properly functioning Ground Fault Interrupter (GFI) outlet.** Never use with standard unprotected outlets. Consult a professional electrician if you are unsure.
2. Always connect your Inflatable Image directly to a GFI outlet. Never connect it to any other electrical or unprotected products.
3. Avoid using extension cords. If one is required, use only outdoor rated products.
4. **Never use your Inflatable Image in wet conditions** to include rain, wet ground or standing water.
5. **Never cover the blower port** when hot or while in use.
6. **Never use your Inflatable Image near heaters, open flames or other potential sources of ignition.** Inflatable Images are flammable products and may catch on fire.

## **WARNING**

**Choking Hazard**

1. Your Inflatable Image contains small parts that could cause serious injury if swallowed.



continue on back

# SET UP INSTRUCTIONS

READ AND FOLLOW ALL SAFETY LABELS, WARNINGS AND INSTRUCTIONS BEFORE ATTEMPTING TO SET UP AND DISPLAY YOUR INFLATABLE IMAGE®.

## Contents

Check package for all required components. Retain packaging materials for product storage. Report any missing parts to your retailer.

## Parts

- Inflatable Image unit (w/ blower and cord. May include lights\*)
  - qty four (4) adjustable tie down ropes
  - qty four (4) tie down stakes
  - qty four (4) base spikes
  - qty one (1) spare light bulb\*
- \*Many Inflatable Images® do not include a lighting system (i.e. most logos).



## Set Up

1. Only an adult should set up an Inflatable Image. Never allow children to set up, use or play with an Inflatable image.
2. Do not set up, use or display in windy conditions, when temperature is below 14°F (-10°C), in heavy rain or standing water.
3. Inspect the product before use. **Never use an Inflatable Image with damaged, cut or frayed plugs or wires.**
4. Place your Inflatable Image on a clean and clear surface outdoors.
5. Check all access zippers and make sure that they are securely closed (photo 1).
6. Find the blower intake area and make certain that it is clear. Do not insert anything into the grill (photo 2).
7. Attach the tie down ropes to each loop on the Inflatable Image (note: do not attach tie down ropes to base loops) (photo 3).
8. Attach tie down ropes to tie down rope stakes (photo 4).
9. Position your Inflatable Image for display.
10. Plug the power cord into a ground fault interrupter (GFI) outlet. **Never use an outlet without GFI protection (photo 5).**
11. Once the Inflatable Image is fully inflated, check the position and then insert tie down ground stakes into ground at four corners around the Inflatable Image (photo 6).
12. Check each tie down rope. If too loose or too tight, adjust the tie down rope at the adjustment point (photo 7).
13. Insert one base spike through each base spike loop on the inflatable and then insert into the ground (photo 8).
14. Check the Inflatable Image again to make certain that it is secure and properly displayed.
15. Never leave your Inflatable Image unattended as personal injury or property damage may result.



photo 1



photo 2



photo 3



photo 4



photo 5



photo 6



photo 7



photo 8

## Take Down

1. To deflate, open the deflation zipper and unplug the blower cord plug from the outlet. Never pull on cord.
2. After the Inflatable Image is fully deflated, carefully roll it up and pack for storage. If the blower is hot, allow it to cool down for at least 1 hour before packing.

## Troubleshooting

If your Inflatable Image is not inflating properly, please check the following:

1. Is there power at the outlet?
2. Is the power cord properly plugged in?
3. Is the blower intake blocked?
4. Is the zipper closed and secure?
5. Is the temperature below 14°F (-10°C)?
6. Is the Inflatable Image torn or otherwise damaged?

We certainly hope that you will enjoy your Inflatable Image. If you experience any problems that require additional assistance, please contact your retailer.



INFLATABLE IMAGES®

got to: [www.inflatableimages.com](http://www.inflatableimages.com)